


ELECTRONIC MILL with LIGHT for Pepper or Salt Ceramic Grinding Mechanism

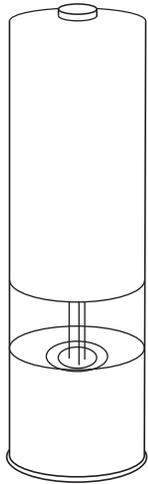

**MESS - FREE BASE
NO SPILLAGE TABLE SETTING**


**FROM FINE TO CRACKED
INFINITE CHOICE
OF
GRIND SETTING**

LIGHT BULB REPLACEABLE

SAVE THESE INSTRUCTIONS

ELECTRONIC MILL with LIGHT

DIAGRAM

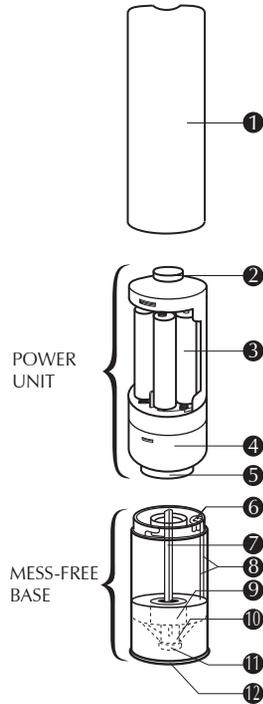


- ① UPPER CAP
- ② PUSH ON SWITCH BUTTON
- ③ BATTERY COMPARTMENT
- ④ GEAR HOUSING
- ⑤ CONNECTOR
- ⑥ SCREW HEADS
- ⑦ DRIVE SHAFT
- ⑧ WIRES
- ⑨ CERAMIC GRINDER
- ⑩ FINE TO COARSE ADJUSTABLE GRINDING MECHANISM
- ⑪ ADJUSTING SCREW
- ⑫ BASE LID

ELECTRONIC MILL with LIGHT

TO INSERT BATTERIES

- 1. REMOVE UPPER CAP**
Hold the MESS - FREE base in one hand, and the other hand gently turn the upper cap anti-clockwise and then lift upwards.

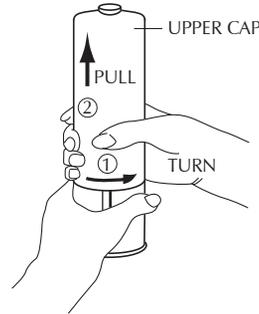


NOTE: KEEP THE MILL UPRIGHT WHILE REMOVING UPPER CAP.

- 2. REMOVE POWER UNIT**
With a little pulling force, lift the power unit off.

ELECTRONIC MILL with LIGHT

- 3. INSERT BATTERIES**


Load 4 "AA" batteries into battery compartment ensuring the polarity markings: ⊕, ⊖ are aligned.

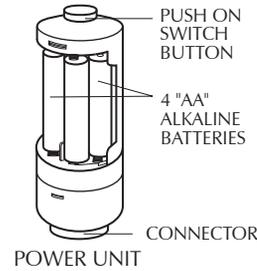

NOTE: ALWAYS USE ALKALINE BATTERIES FOR THE BEST GRINDING EFFICACY

TO FILL

- 4. Pour peppercorns or salt crystals into clear chamber through the circular opening at the top.**

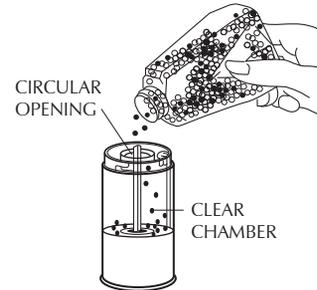


NOTE: DO NOT FILL BEYOND BOTTOM EDGE OF CIRCULAR OPENING.

ELECTRONIC MILL with LIGHT

GET READY TO MILL

- 5. REPLACE POWER UNIT**

First, place the MESS - FREE base upright and swing the drive shaft to keep it centrally. With the wire loops positioning towards the screw heads, place back the power unit and turn it a little bit helping the drive shaft to insert into the square notch. Then, push the power unit downwards till the connector fully merges in circular opening.

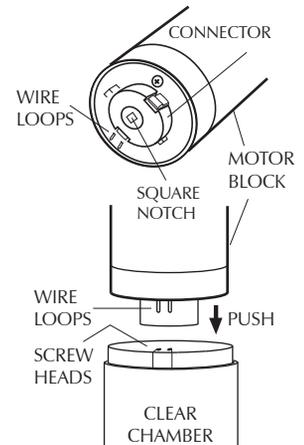

NOTE: PRESS THE SWITCH BUTTON, POWER UNIT IS POSITIONED CORRECTLY IF LIGHT BULB ILLUMINATES. IF NOT, TRY ABOVE STEP AGAIN.

ELECTRONIC MILL with LIGHT

6. REPLACE UPPER CAP

Slip the cap onto the power unit and turn the cap till it drops into the position fully seated with the MESS - FREE base.

Gently turn the cap clockwise till "click" sounds.

NOTE: IF THE CAP DOESN'T DROP, ALIGN THE SMALL LOCKING PINS WITH THE SLOTS FOR THE CAP TO FULLY SIT ON THE CONTAINER.

DO NOT FORCE THE CAP DOWN IF NOT ALIGNED, AS THIS WILL DAMAGE THE MECHANISM.


ELECTRONIC MILL with LIGHT

TO SET THE MESS FREE BASE

7. SET THE MESS - FREE BASE

Turn the MESS - FREE base lid at bottom to align the tiny lug in lid with the printed index "▲".

The mechanism then allows fresh-ground pepper or salt to pass through the openings in lid.

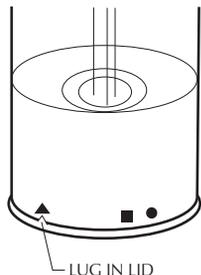

THE MILL IS NOW READY FOR USE

ELECTRONIC MILL with LIGHT

TO USE THE MILL

8. Press the button at the top of the mill and ground pepper or salt will be dispensed, the light bulb will illuminate.

9. FOR USE AS SALT MILL

The little salt crystals of various kinds and the moisture - absorbing character of salt may fully stuff the grinder and block it.

In this occasion, turn the mill upside down with the switch button pressed and assisted by a little shaking to clear the jammed salt from grinder. And, shake the mill occasionally to prevent clogging and for the constant grind flow.

THE MILL
UPSIDE DOWN



THE SWITCH
BUTTON PRESSED


ELECTRONIC MILL with LIGHT

10. After use, turn the base lid to align the lug with "■". The mechanism then works to prevent residual pepper or salt from spilling-NO MESS TABLE SETTING.

11. GRIND ADJUSTMENT

Turn the mill upside down, and turn the adjusting screw between thumb and forefinger while the other hand holding the mill.

NOT: WHILE UPSIDE DOWN, PRESS THE SWITCH BUTTON TO HELP CLEAR GRINDS FROM GRINDING MECHANISM FOR EASIER ADJUSTMENTS.

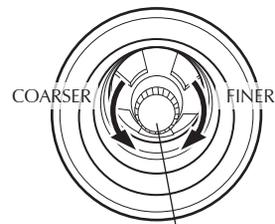

ADJUSTING SCREW

BOTTOM VIEW

Turn adjusting screw clockwise for fine grind, turn the screw anti - clockwise for coarse grind.


ELECTRONIC MILL with LIGHT

TO REPLACE LIGHT BULB

12. First, turn the MESS - FREE base lid to align the lug in lid with the index "●" then pull the lid off the mill.

Clamp the bulb socket between thumb and forefinger, and gently pull it out. Take a new one (bulb with socket) and position two pins towards the two small holes in the socket holder.

Insert the pins into the holes, then following the side rails to slide the socket fully into the socket holder.

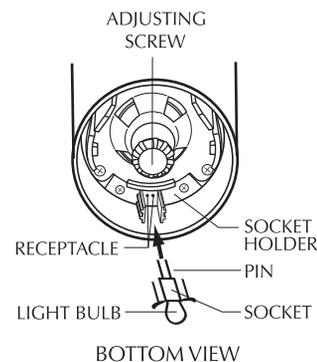

BOTTOM VIEW

Place back the MESS - FREE base lid by aligning the lug with "●" and turn leftwards.